

UNIVERSAL

# ARCH KIT

TOLL  
FREE

855-ARCHPRO

(855-272-4776)

www.ArchKit.com







## Cove Ceiling

Included in your cove ceiling kit:

- a. Cove Pieces
- b. Inside Corners
- c. Outside Corners

Tools needed:

- a. Nail Gun
- b. Brad Nailer / Stapler
- c. Circular Saw
- d. Tape Measure
- e. Square
- f. Snap Line

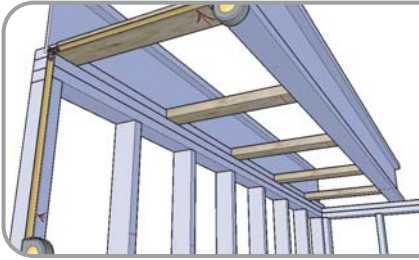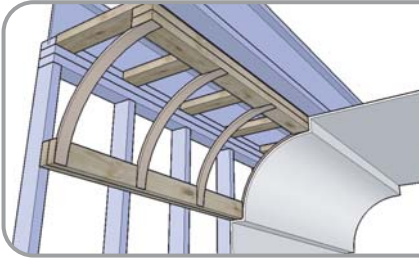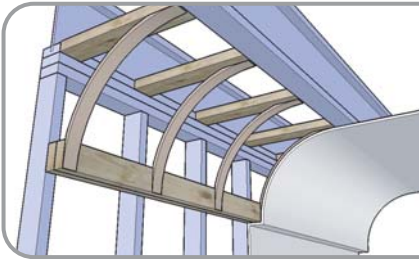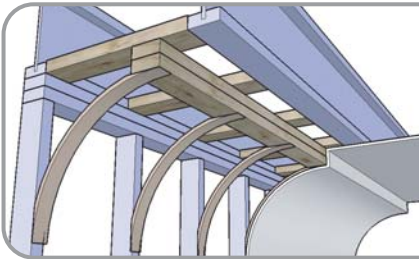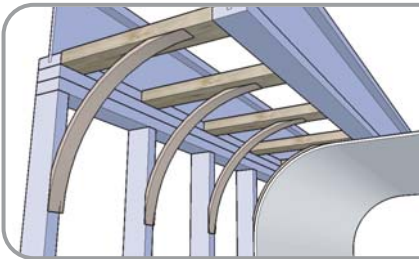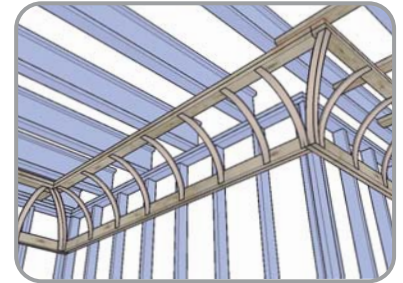

1

**Choose one of the four different styles.**

*No Reveal-* At each corner of the room measure and mark the wall down from the ceiling 14 inches (rise). Measure and mark the ceiling out from the wall 14 inches (rise).


*Top Reveal-* At each corner of the room measure and mark the wall down from the ceiling 14 inches plus the thickness of your reveal (rise). Measure and mark the ceiling out from the wall 14 inches (rise).

*Bottom Reveal-* At each corner of the room measure and mark the wall down from the ceiling 14 inches (rise). Measure and mark the ceiling out from the wall 14 inches plus the thickness of your reveal (rise).


*Top & Bottom Reveal-* At each corner of the room measure and mark the wall down from the ceiling 14 inches plus the thickness of your reveal (rise). Measure and mark the ceiling out from the wall 14 inches plus the thickness of your reveal (rise).

2


Snap a line at the marks on the wall and along the ceiling around the entire perimeter of the room.

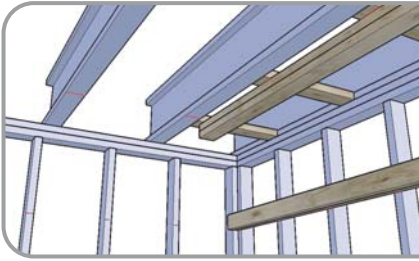**3**


If using a reveal, line up the sides of the ledgers to your snap line and nail in place. *Note: Blocking between the wall studs and/or in the ceiling may be necessary to sufficiently attach the cove pieces.*

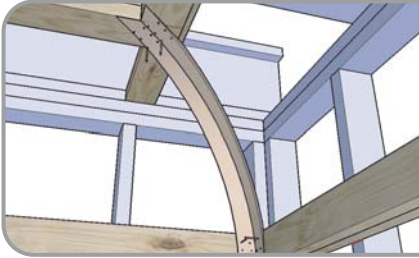**4**


Using a brad nailer / stapler, install your inside (90°) and/or outside (90°) corners to align with your snap line.

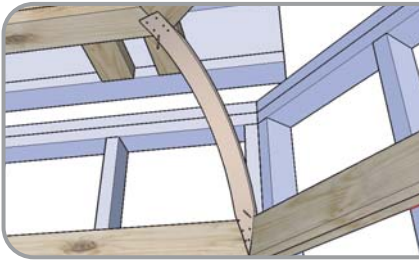**5**


Install any other corners which are not 90° (a right angle) by angle cutting the bottom of a cove piece and aligning it to your snap line. Brad nail / staple in place.

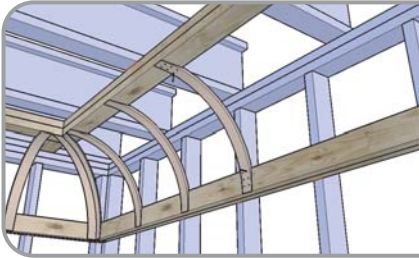**6**

Brad nail / staple all cove pieces 16" O.C. along the walls and ceilings between all the corners. *Note: Wherever a reveal has not been used, blocking between the wall studs and/or in the ceiling may be necessary to sufficiently attach the cove pieces.*

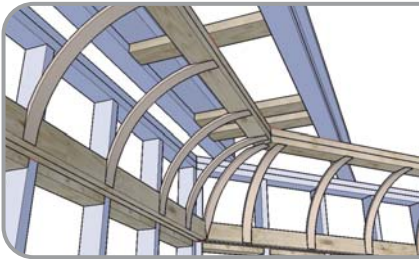**7**

If necessary and/or according to code requirements, fire block the cove ceiling along the perimeter.

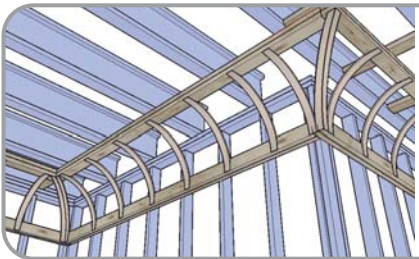**8**

You are now ready for electric and drywall!

Disclaimer: Standard safety precautions should be taken when installing Arch-Rite® arches. Installer should be familiar with safe operating procedures for power tools, wood working tools, and ANY ladders necessary for installation. The installer should follow published installation instructions and wear proper head and eye protection. Arch-Rite® and its Licensees assume no liability for any injury or accident as a result of installing any Arch-Rite® products.

All Arch-Rite® products are designed to bear only the weight of drywall, drywall products, paint, trim and/or finishing items. **No Arch-Rite® products are designed to bear the weight and forces of other framing members.** All Arch-Rite® products are to be used for aesthetic purposes and are non load-bearing.